




SC2 version

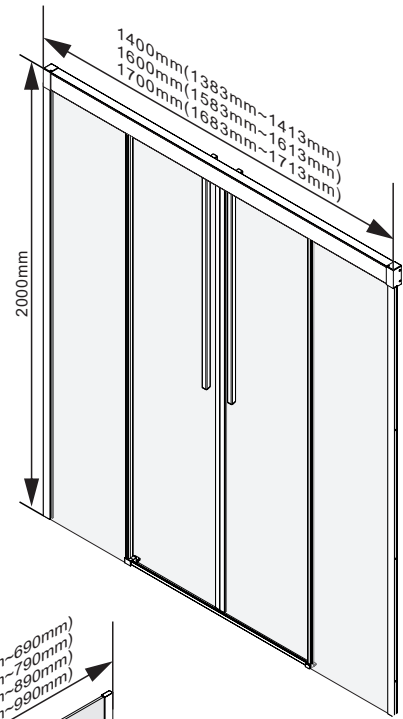


SC2+F version




























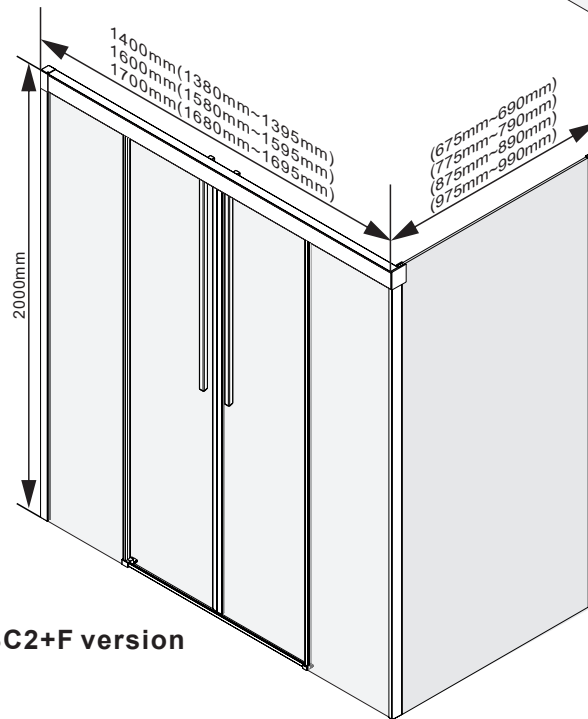


SC2+F+F version

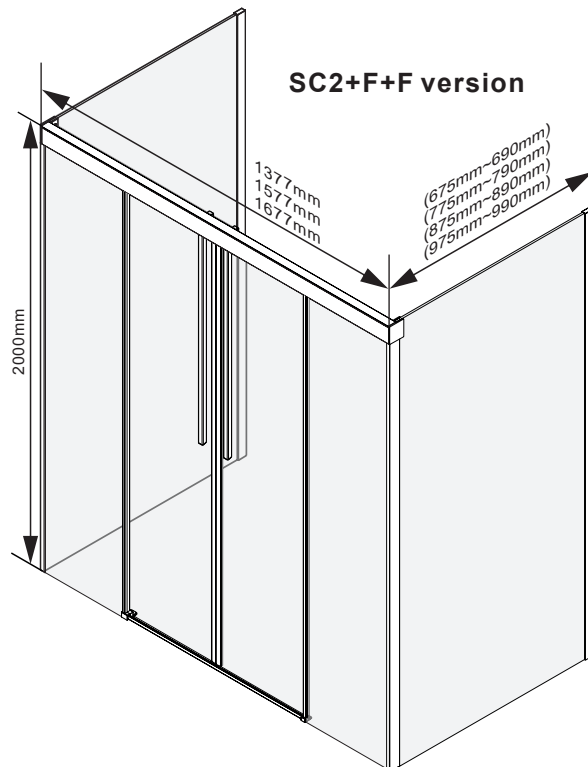


PARTS LIST

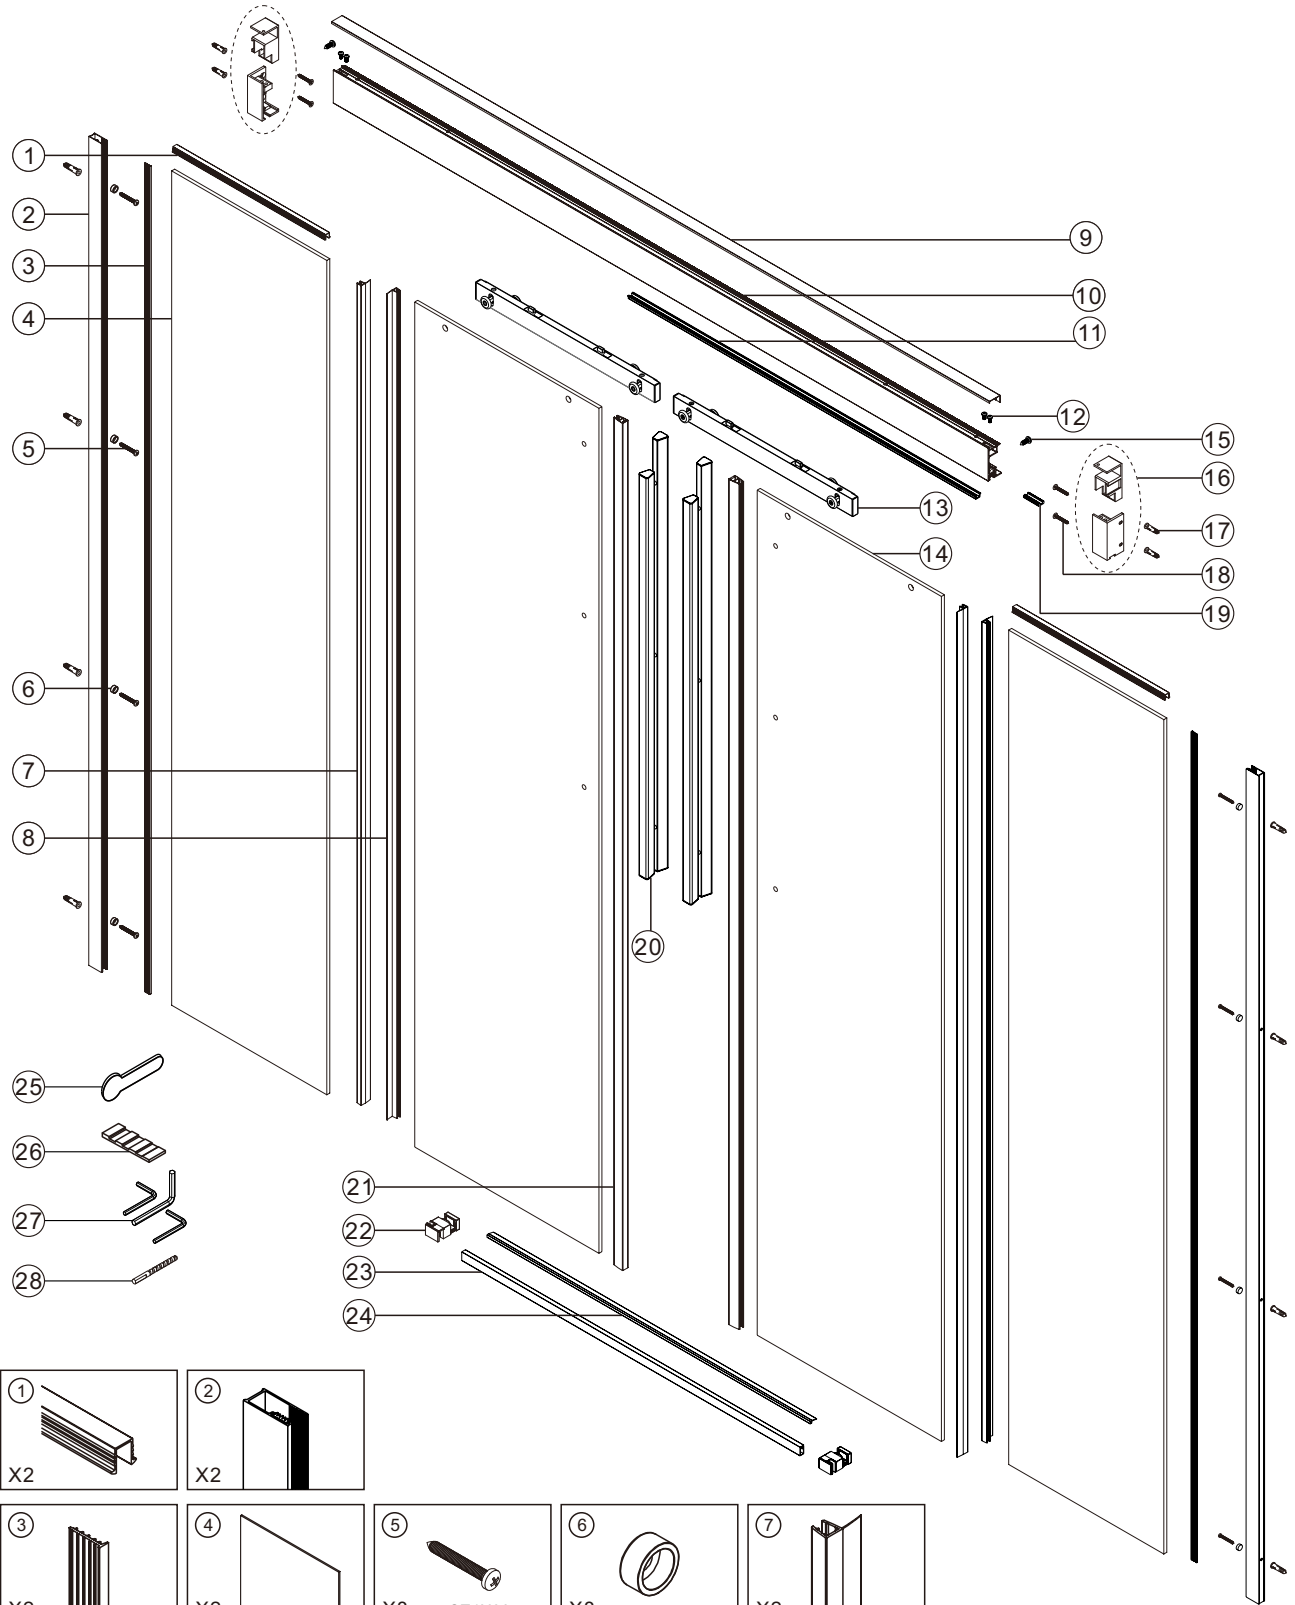


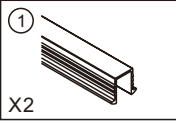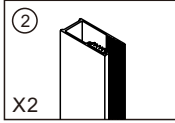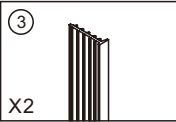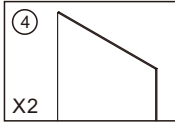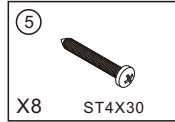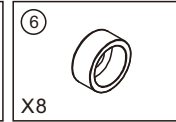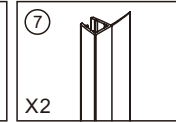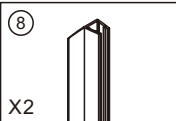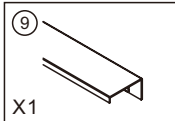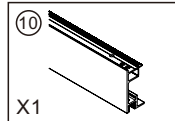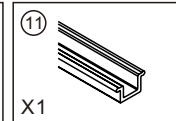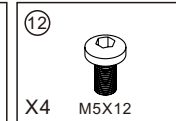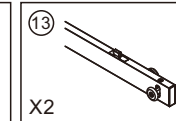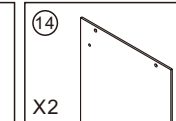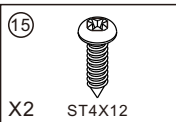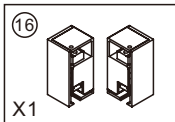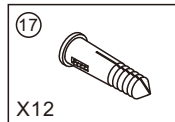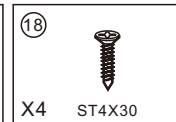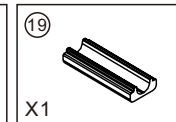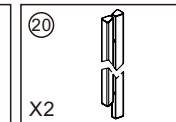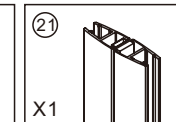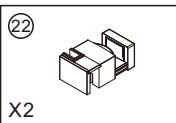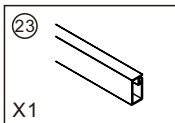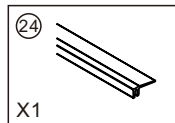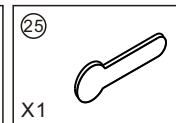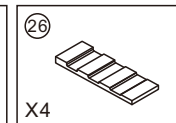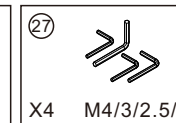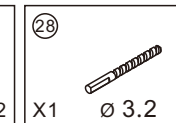 X2	 X2											
 X2	 X2	 X8 ST4X30	 X8	 X2								
 X2	 X1	 X1	 X1	 X4 M5X12	 X2	 X2						
 X2 ST4X12	 X1	 X12	 X4 ST4X30	 X1	 X2	 X1						
 X2	 X1	 X1	 X1	 X4	 X4 M4/3/2.5/2	 X1 Ø 3.2						


PARTS LIST

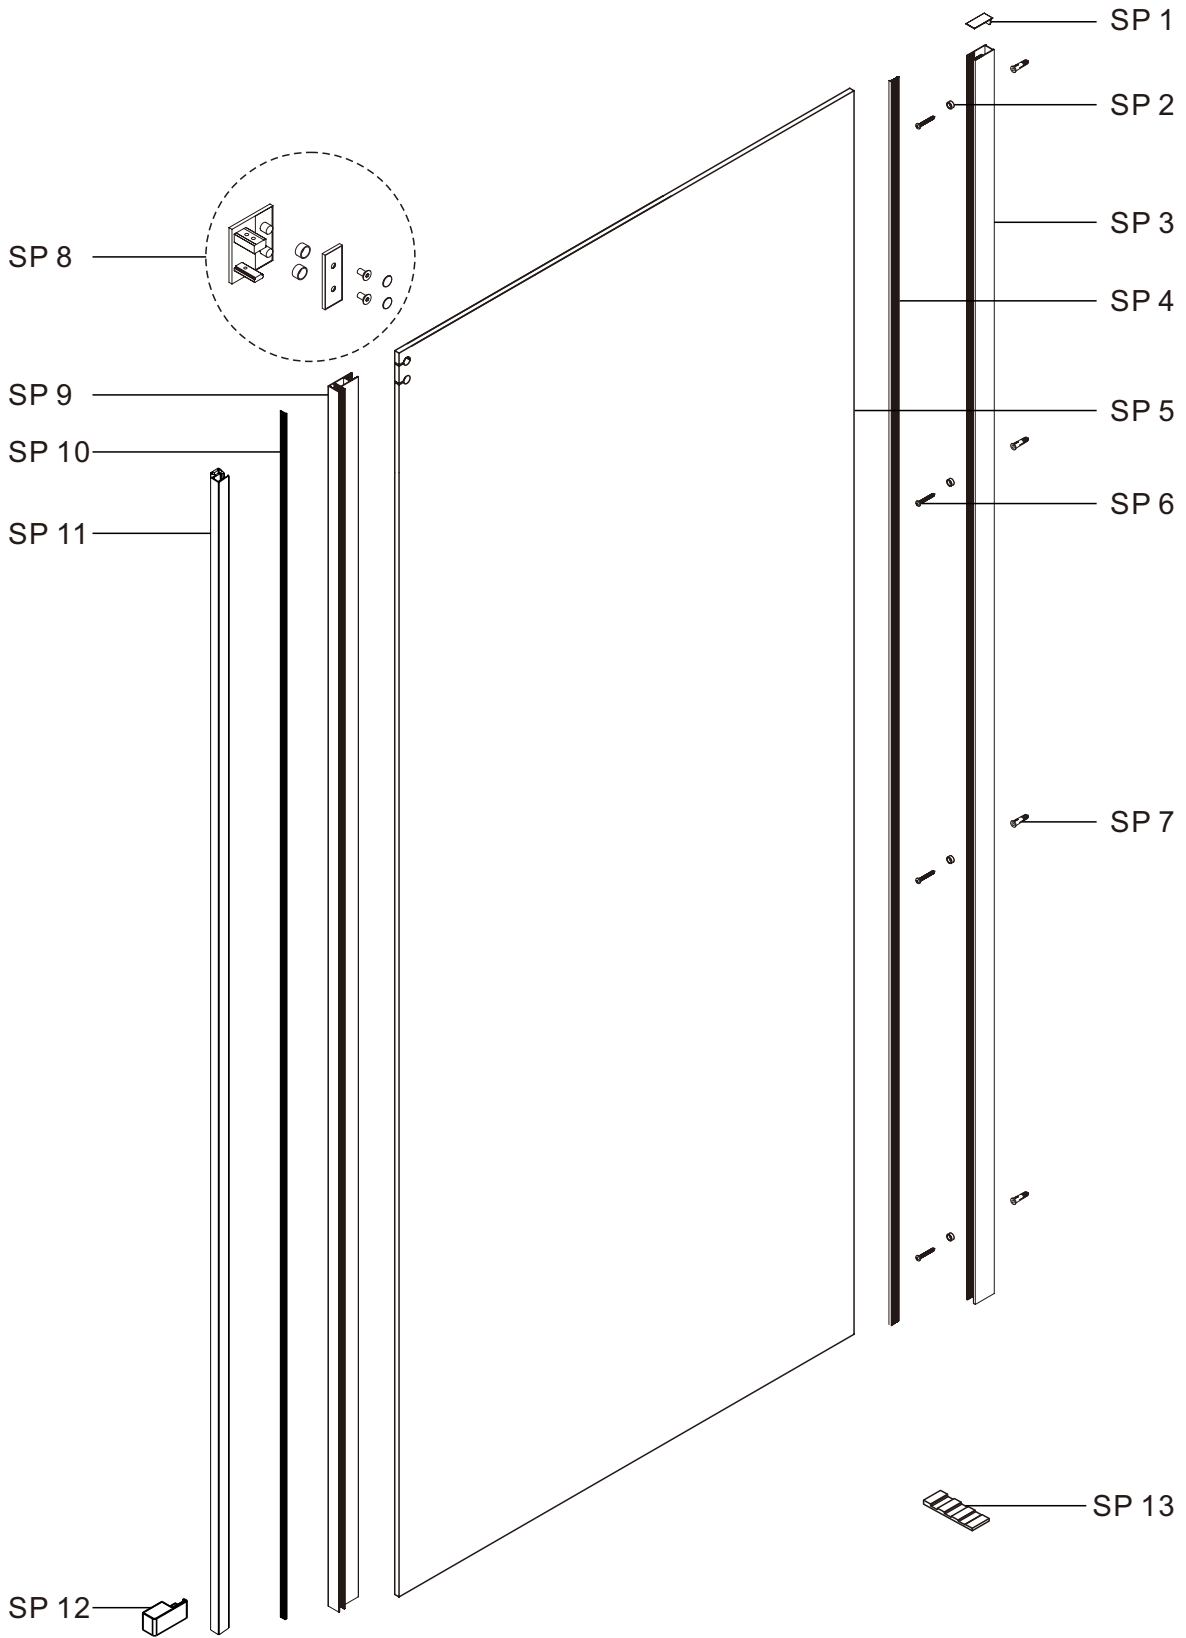

① X1 	② X1 	③ X1 	④ X1 	⑤ X1 	⑥ X4 ST4X30 	⑦ X4
⑧ X1 	⑨ X1 	⑩ X1 	⑪ X1 	⑫ X1 	⑬ X2 	

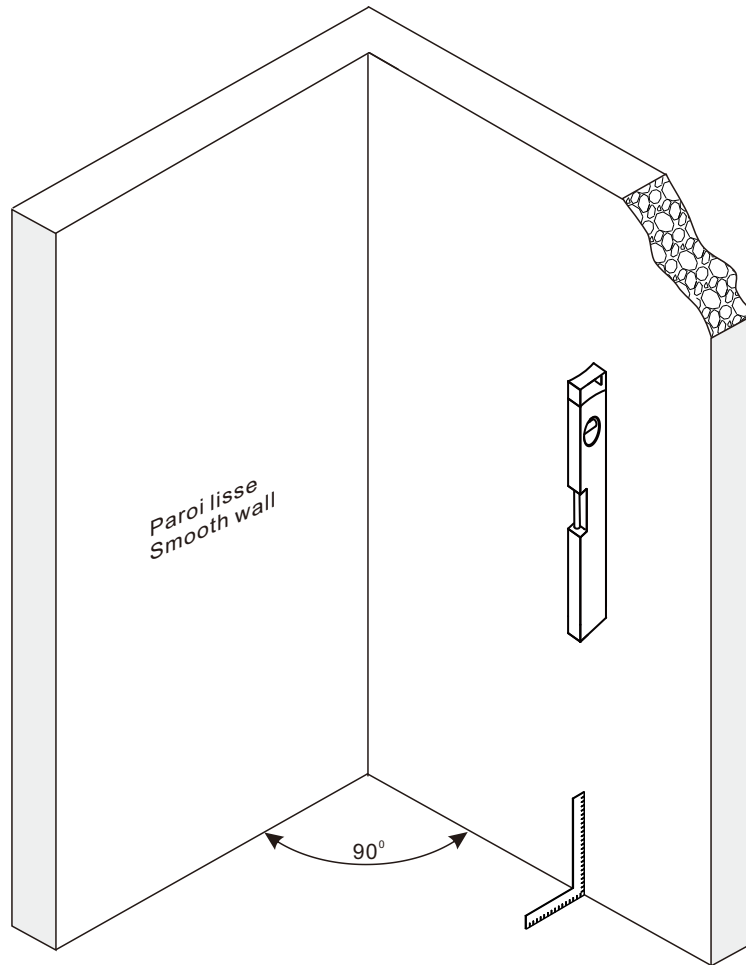


TOOLS AND MATERIALS REQUIRED

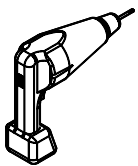


PERCEUSE
DRILL




VIS
SCREWS

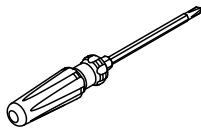

TOURNEVIS
SCREWDR

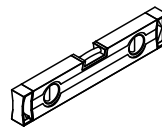


NIVEAU
LEVEL




COUTEAU DE PRECISION
PRECISION KNIFE



SILICONE
SILICONE




FORETS: 1/8", 3/16" ET 1/4"
*FORET À MAÇONNERIE
DRILL BITS: 1/8", 3/16" ET 1/4"
*MASONRY DRILL BIT

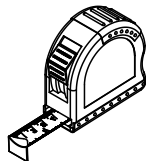


RUBAN À MESURER
MEASURING TAPE



ÉQUERRE
SET SQUARE




CRAYON
PENCIL



MAILLET
MALLET






CONTINUED

A 01

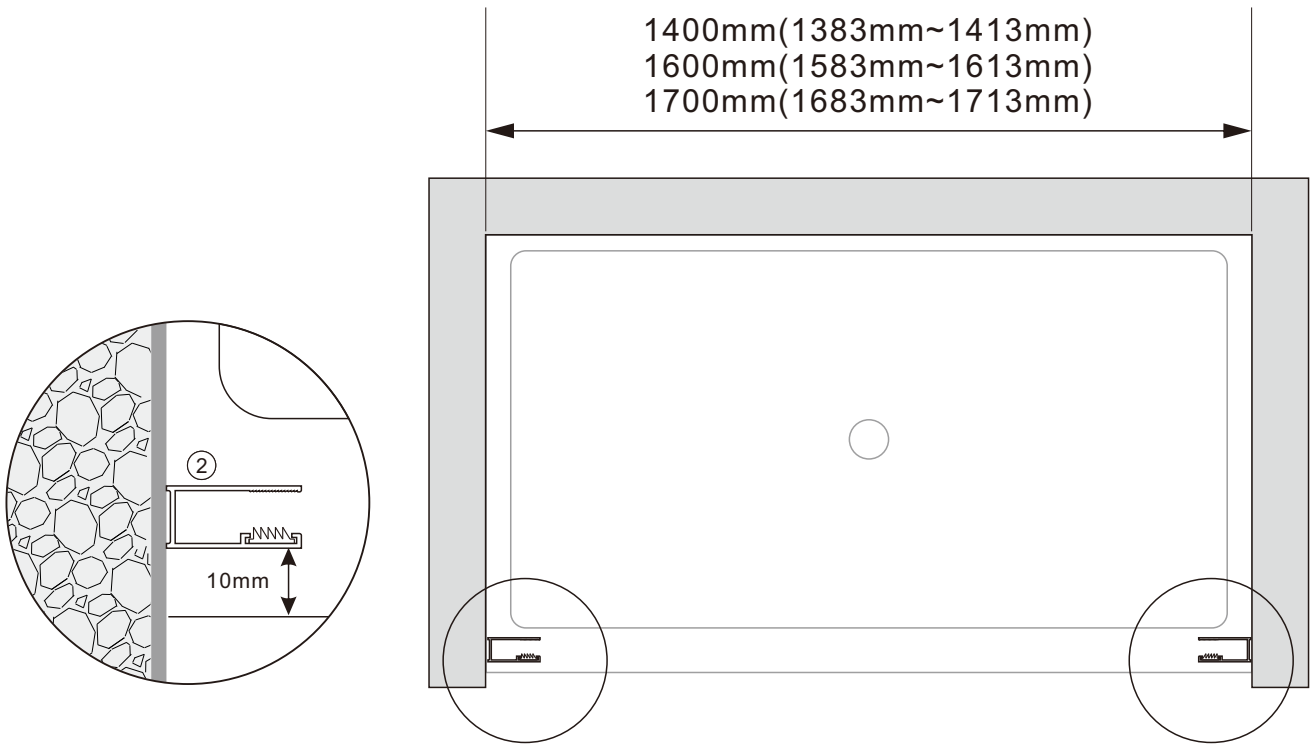


CONTINUED

A 02

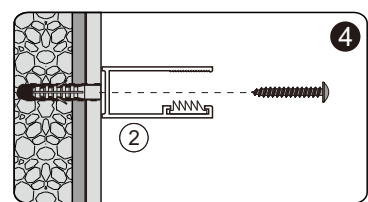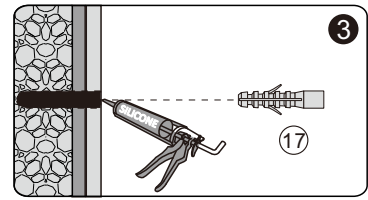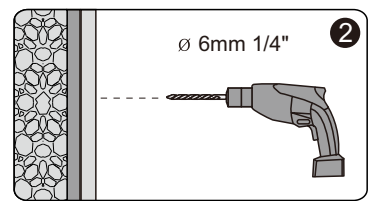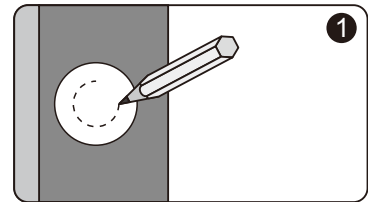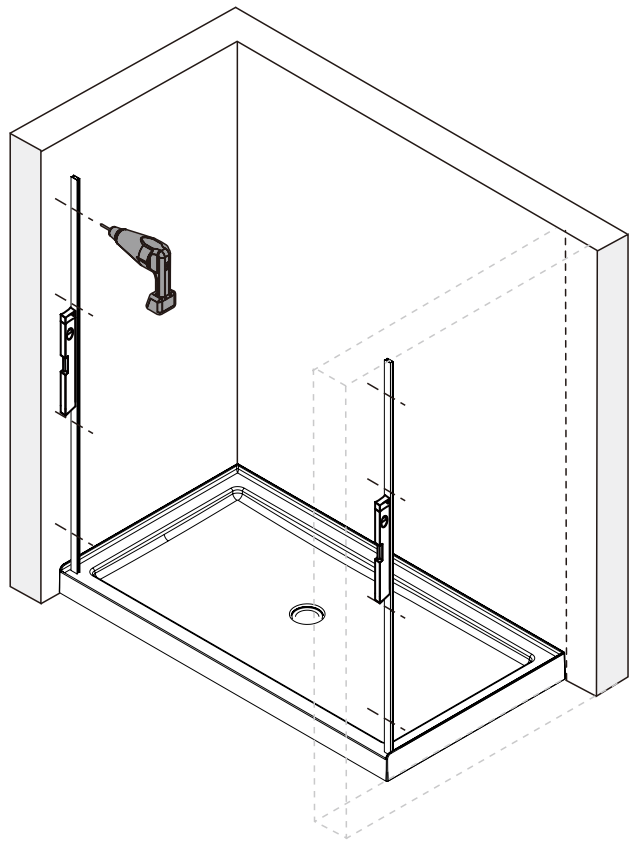


CONTINUED

A 03

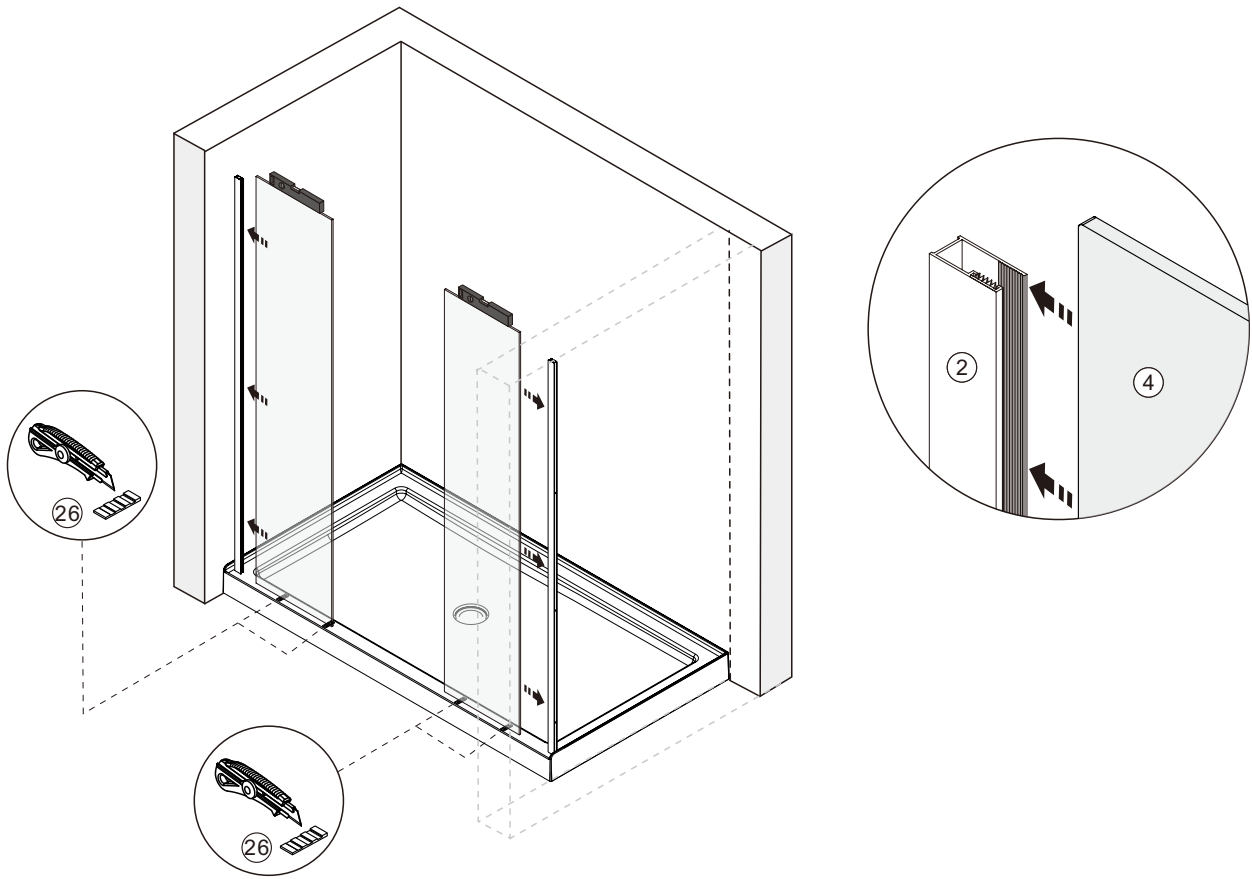







CONTINUED

A 04

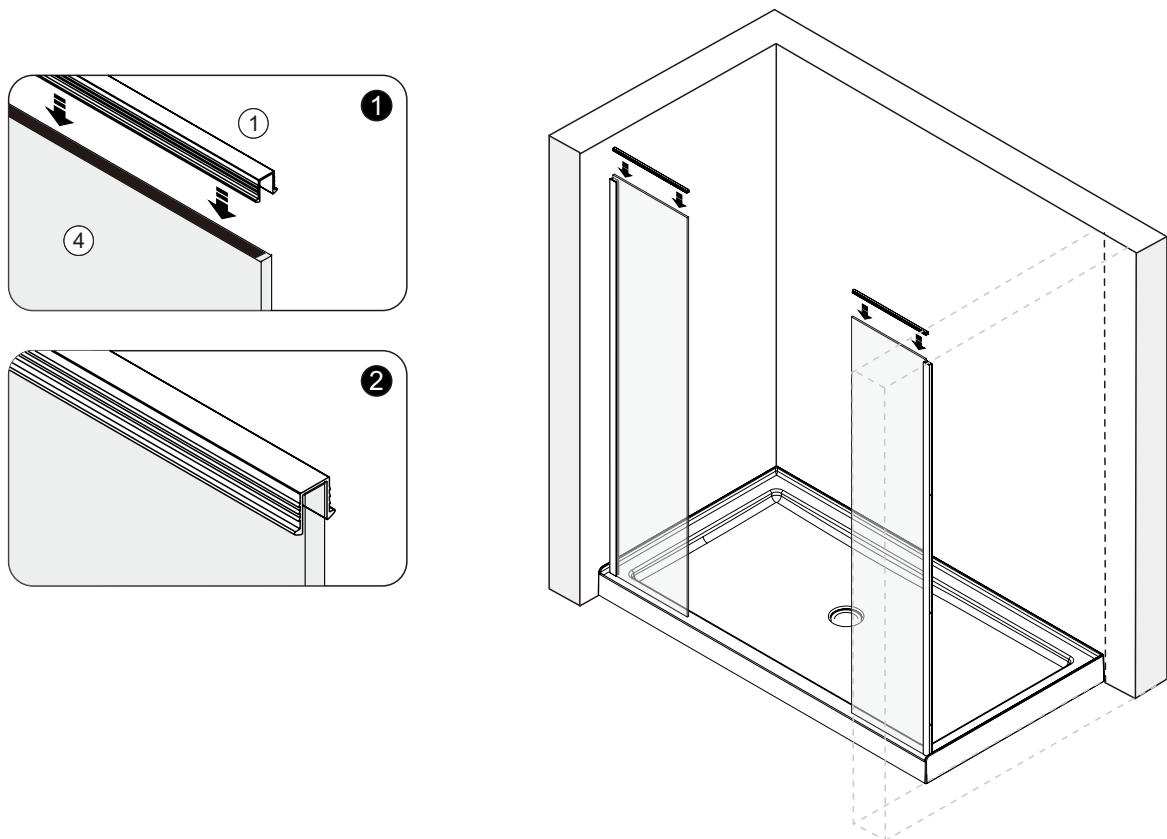


CONTINUED

A₀₅

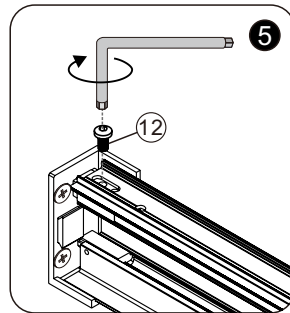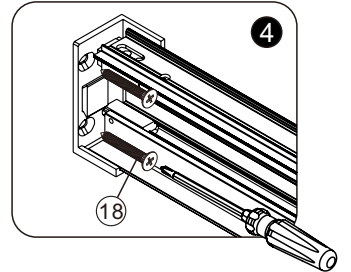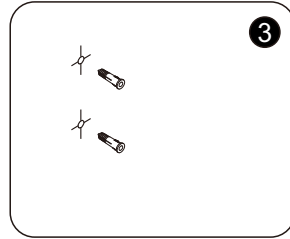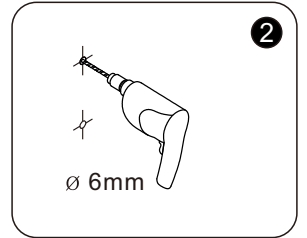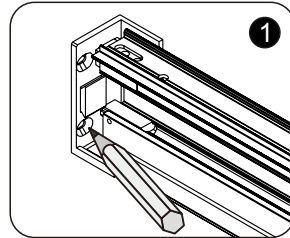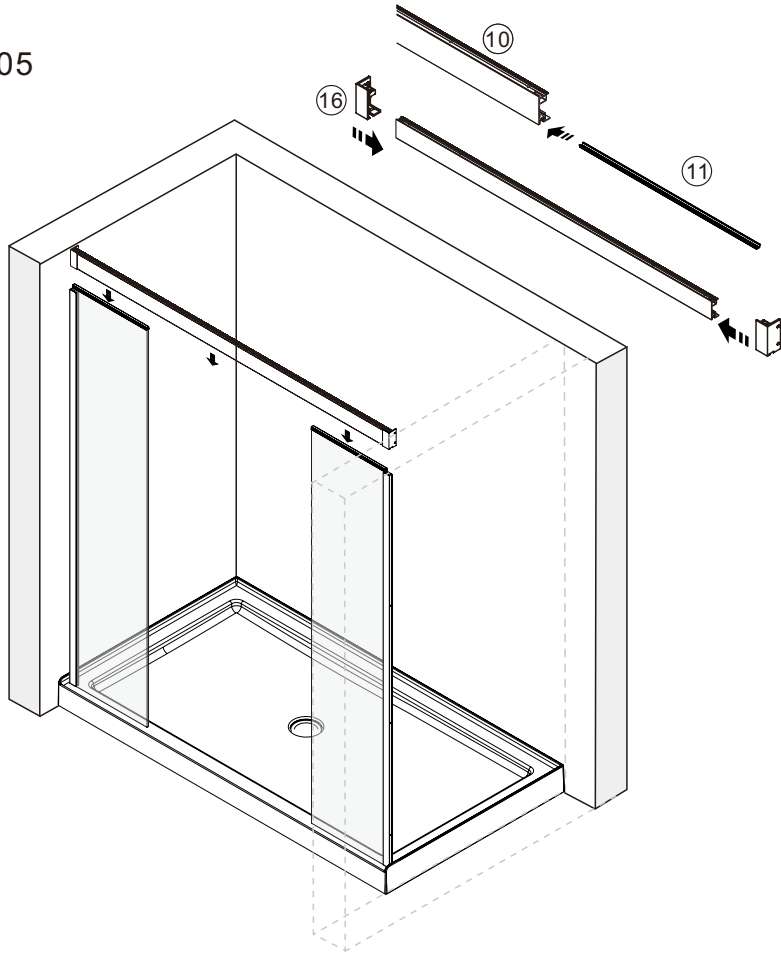


CONTINUED




A₀₆

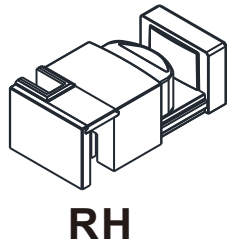





RH

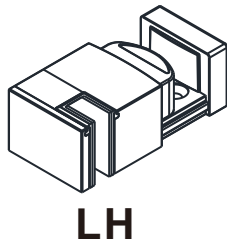

LH

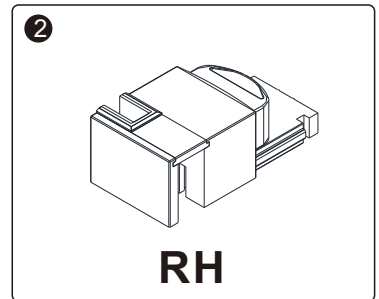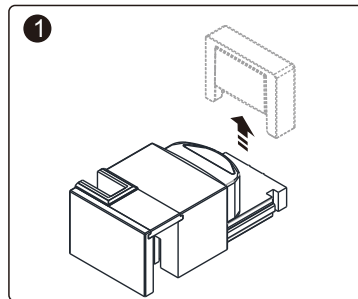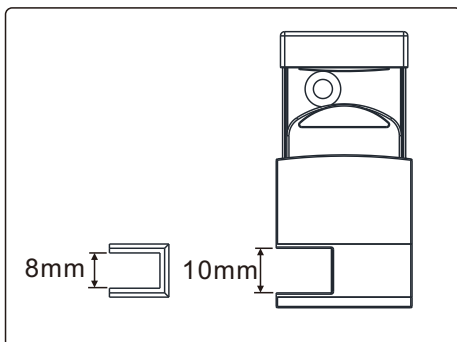


RH

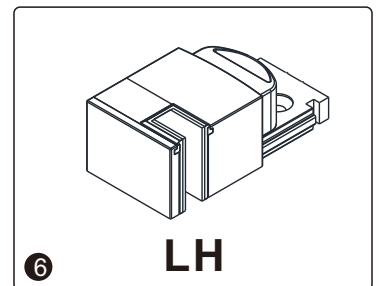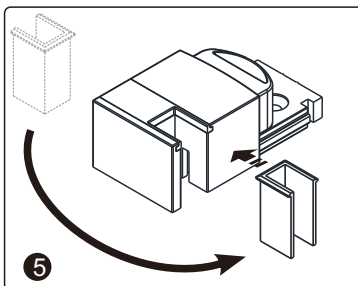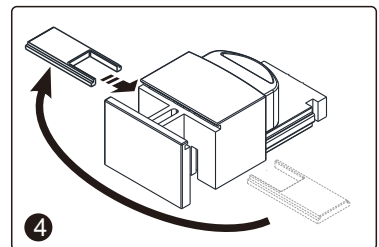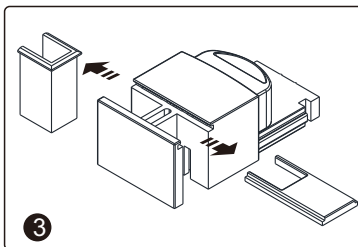

LH


CONTINUED

A 07


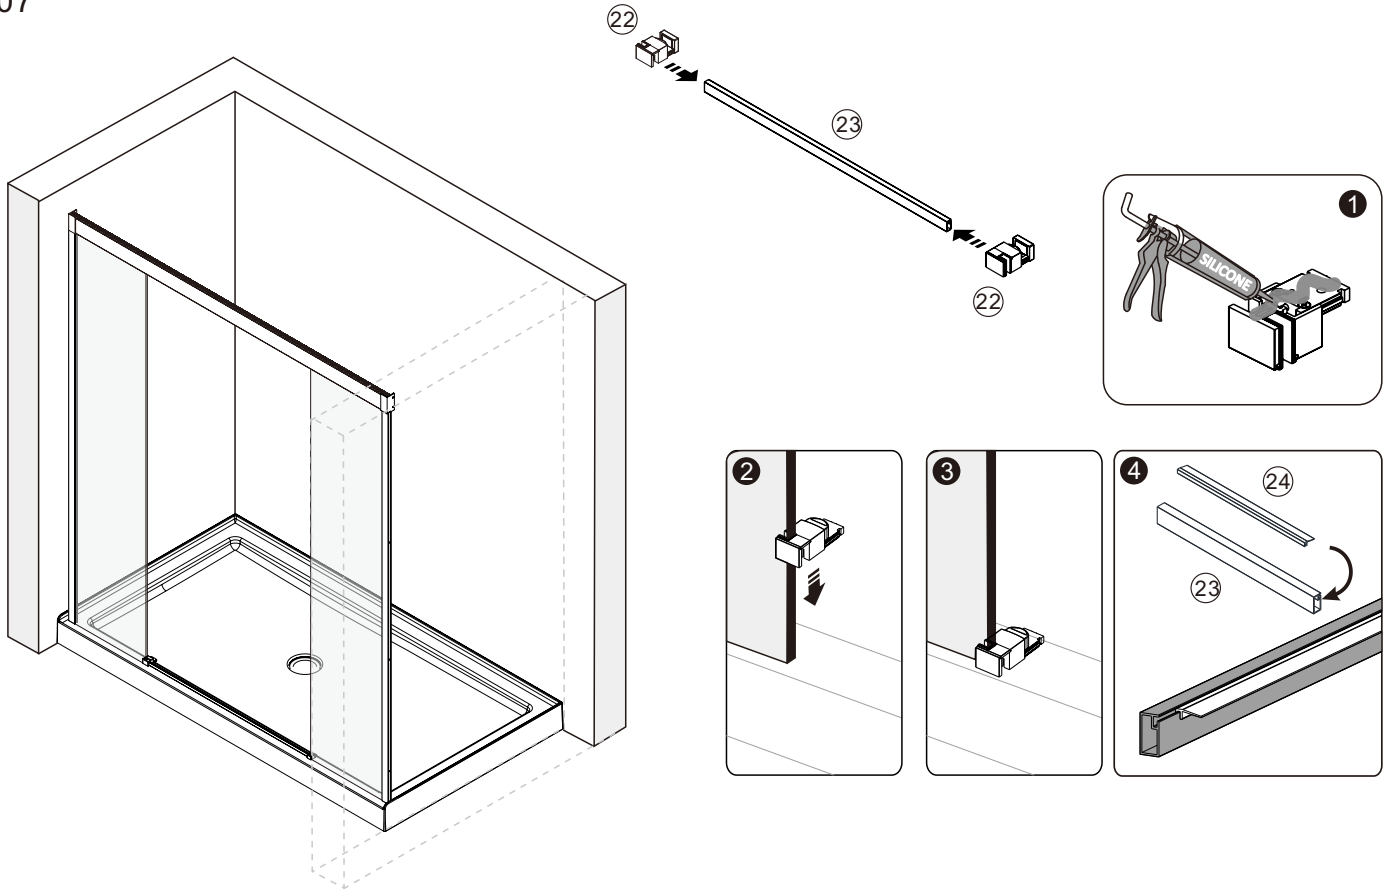


CONTINUED



A 08

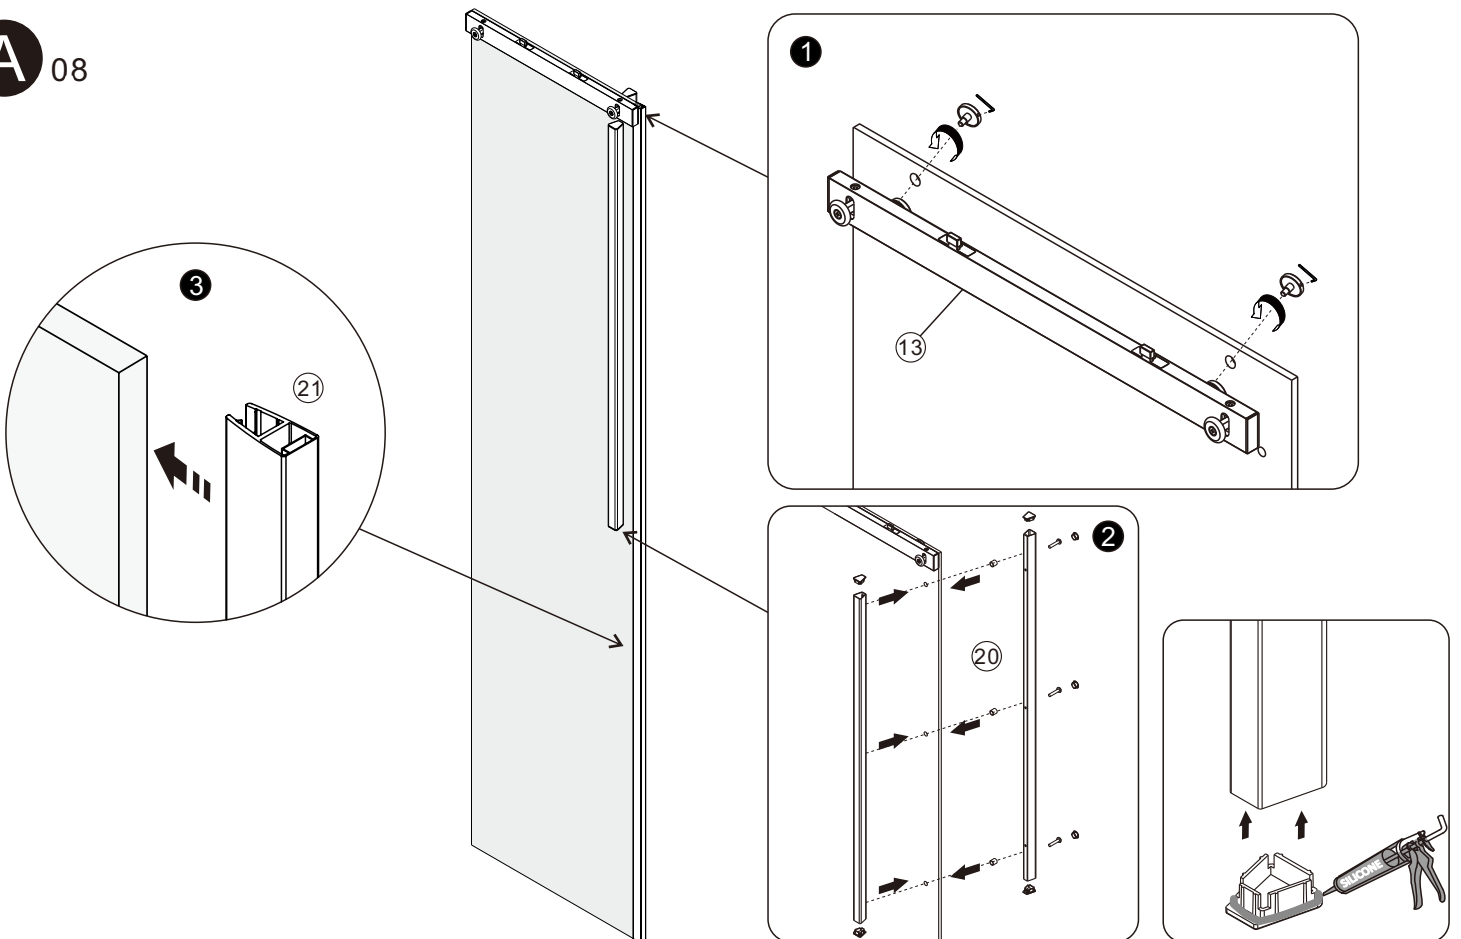






A 09

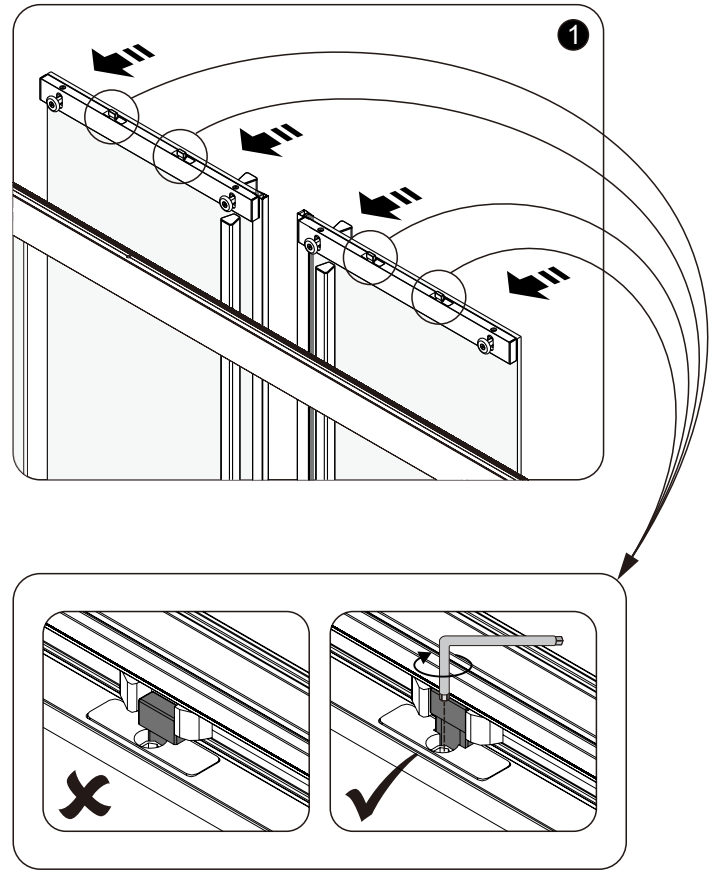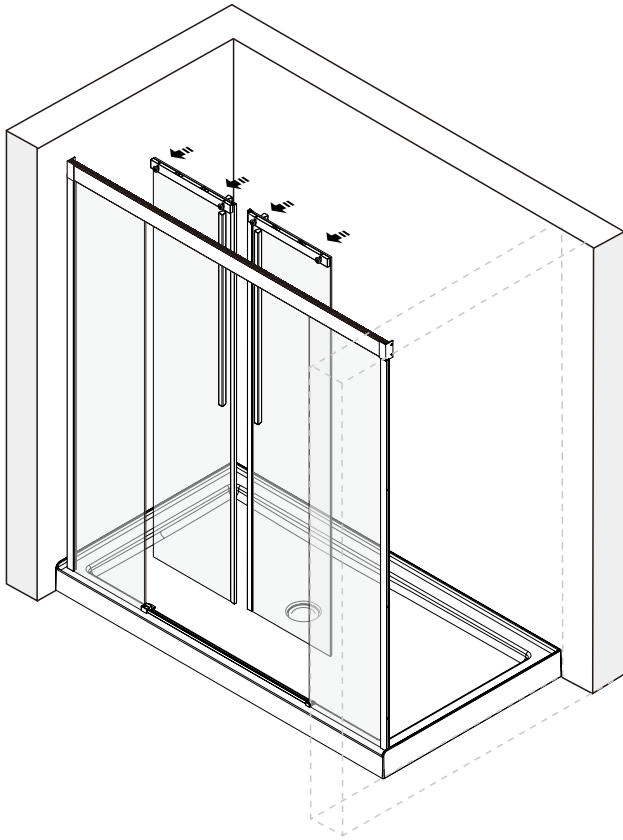


A 10

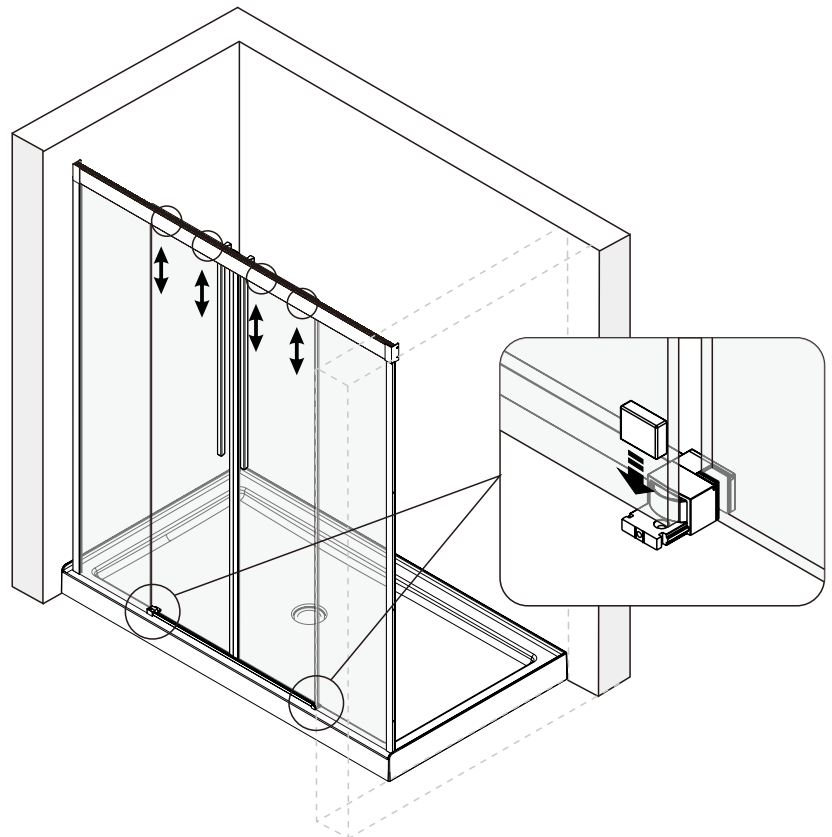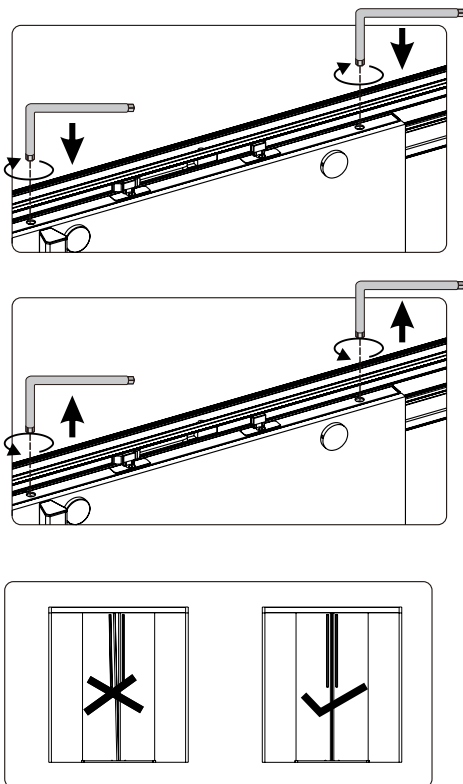




A 11

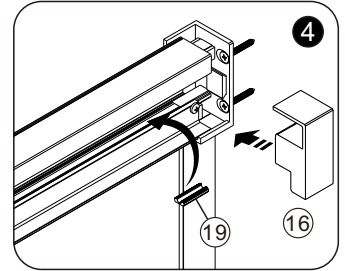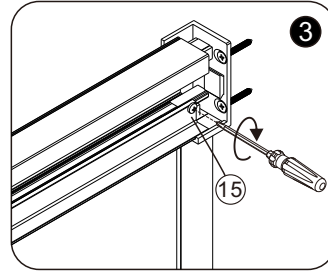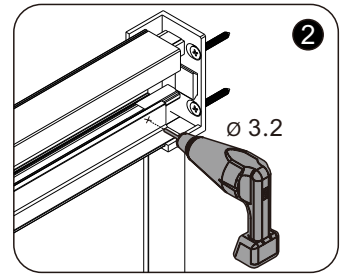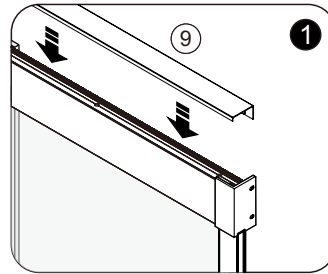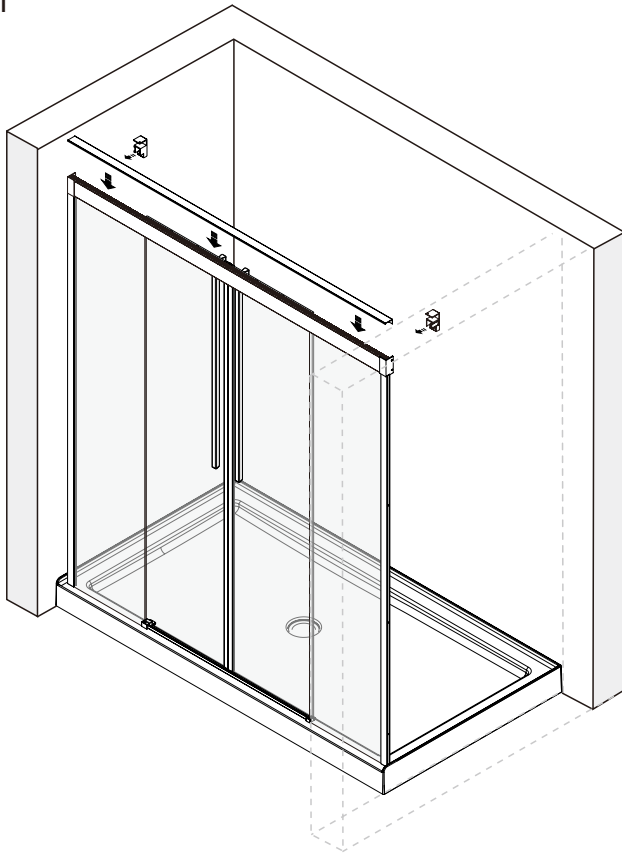

A 12

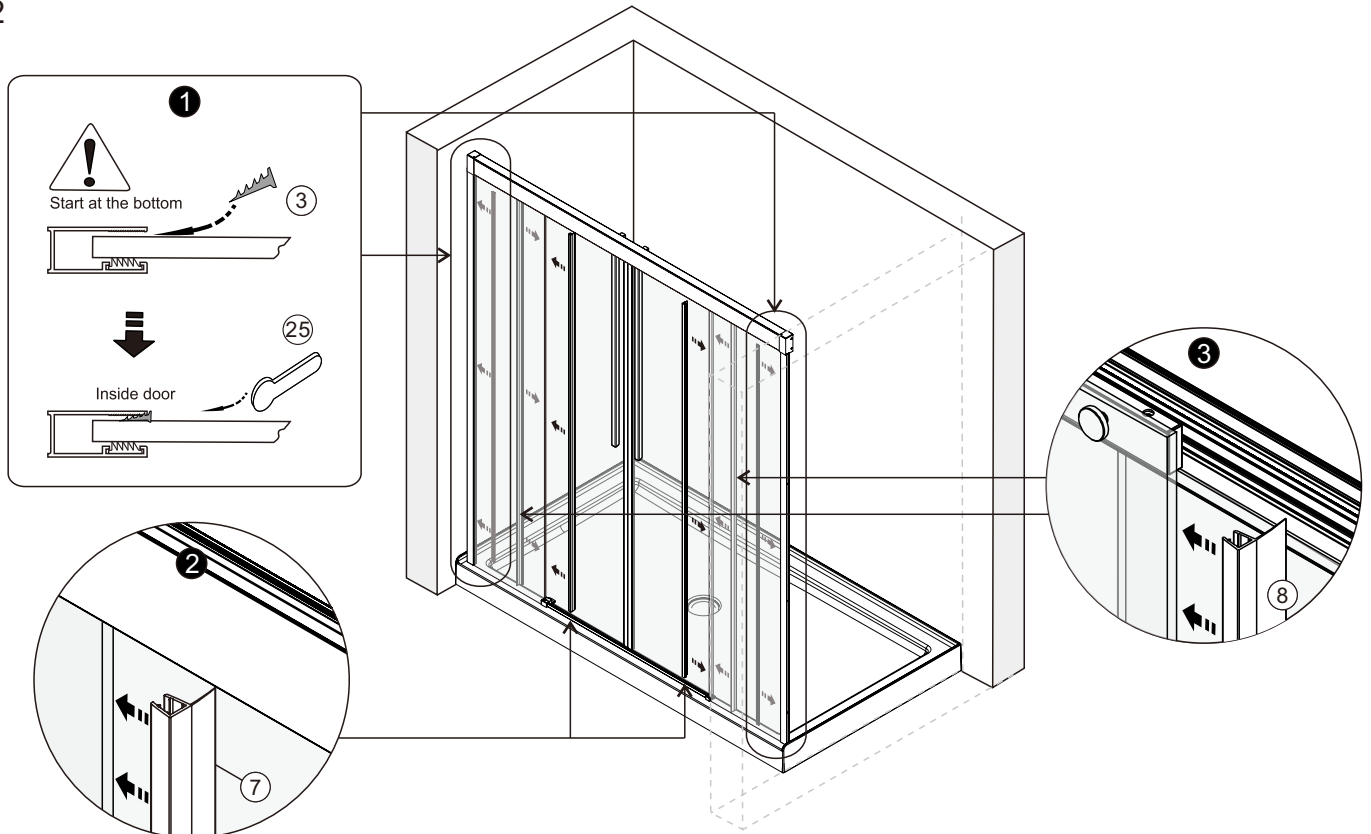


A 13

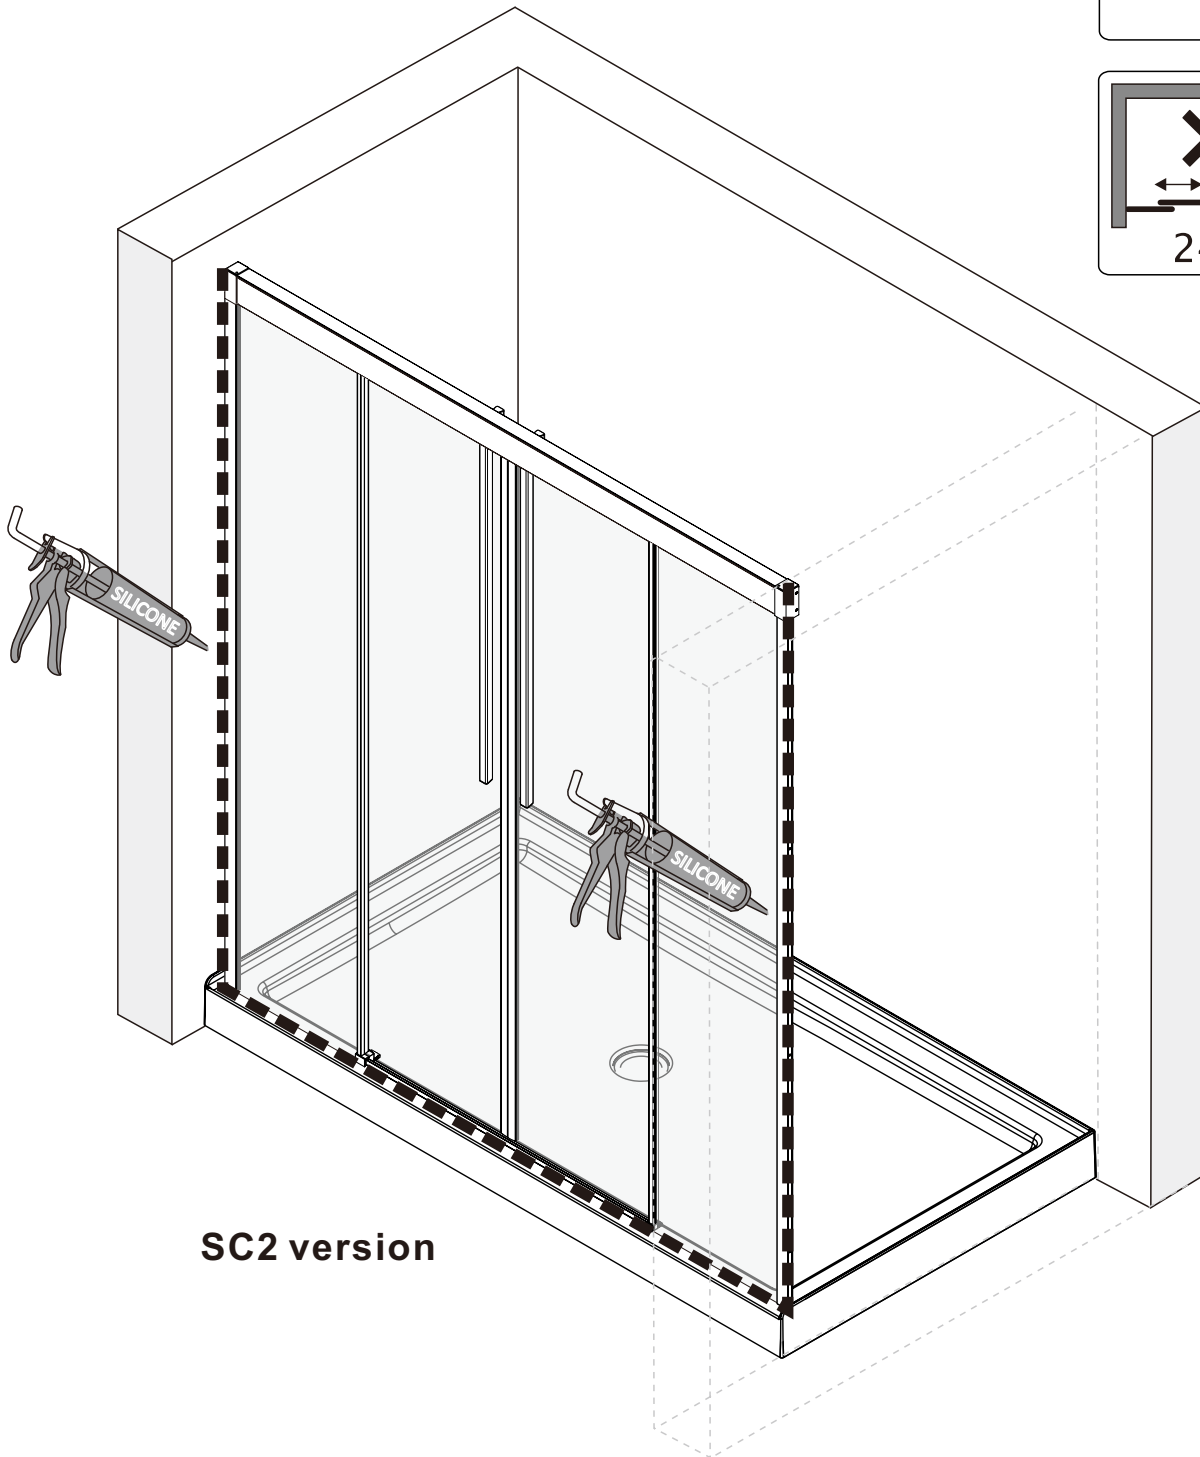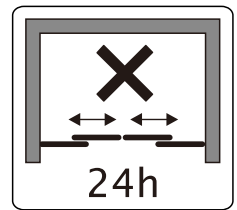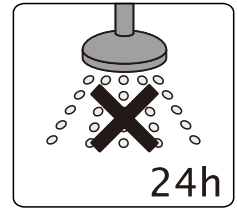

SC2 version


CONTINUED

B₀₁



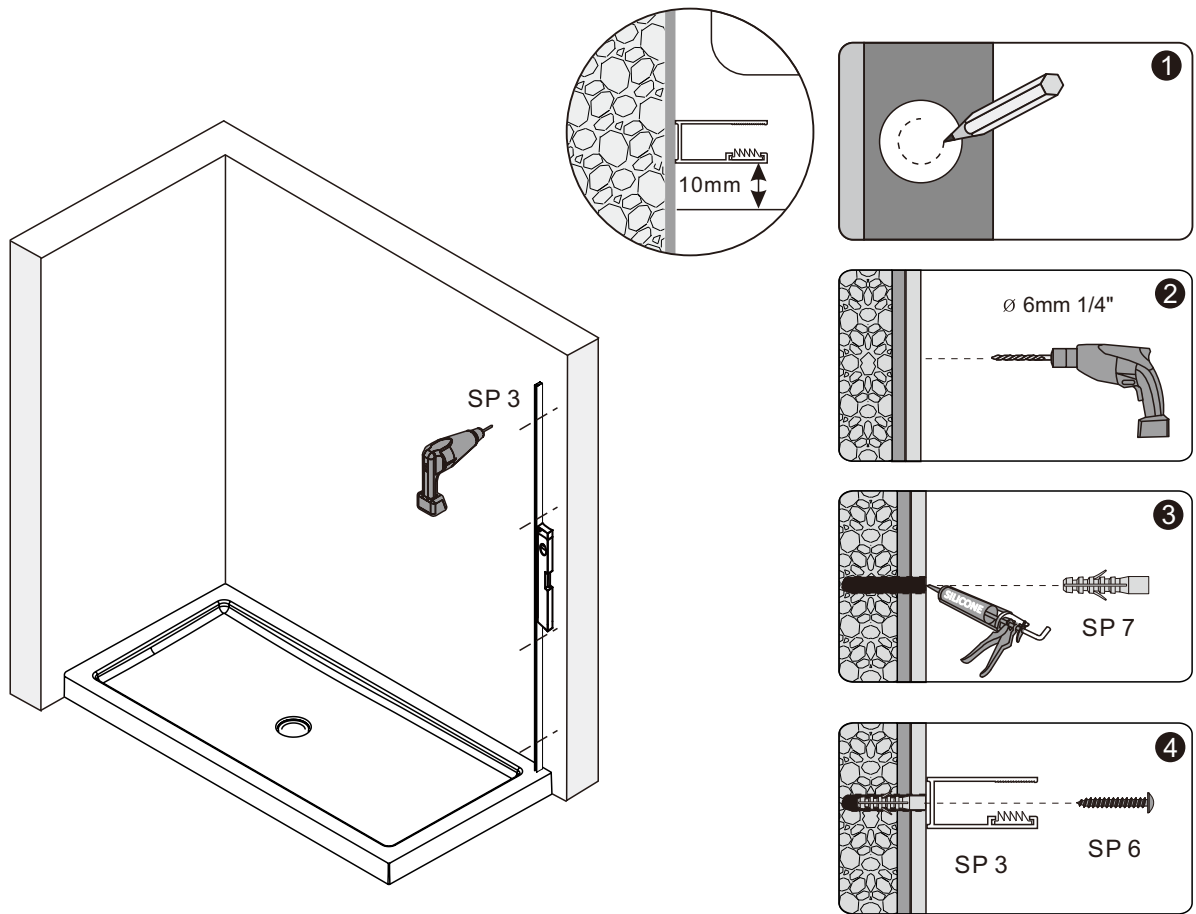


CONTINUED

B₀₂







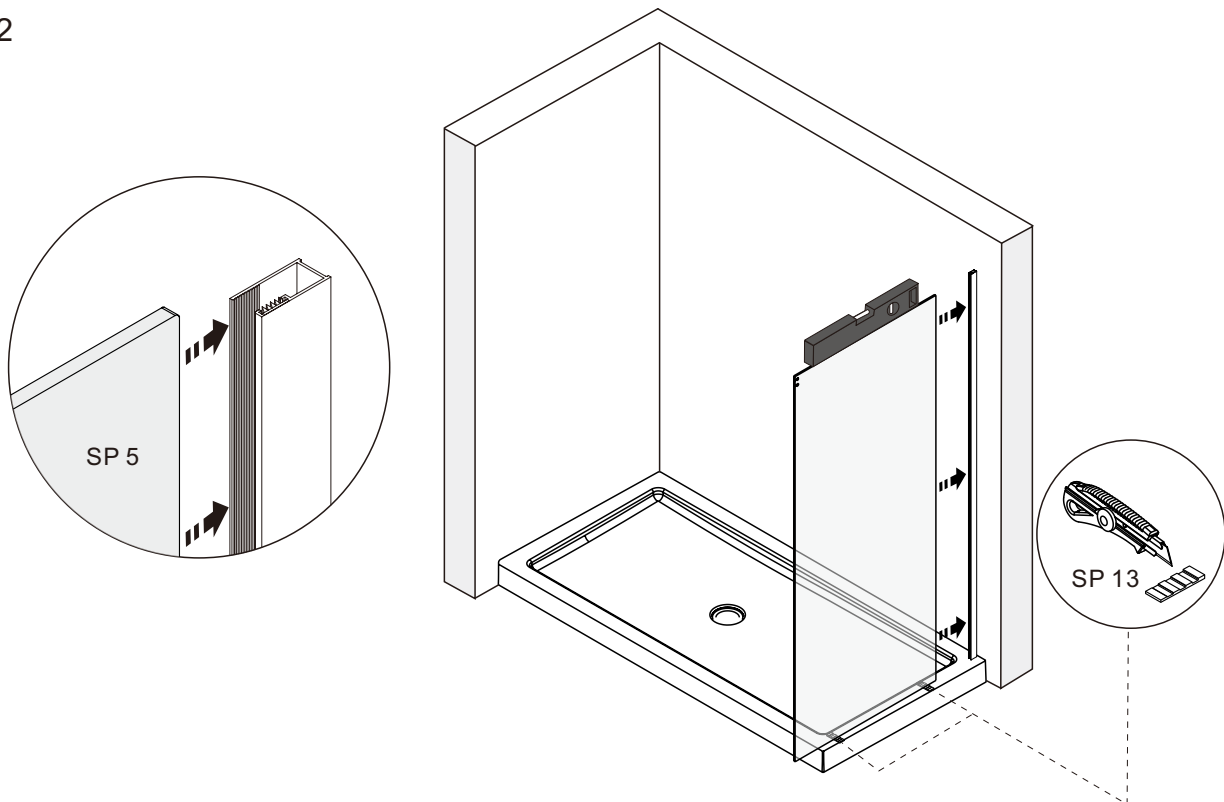


B 03

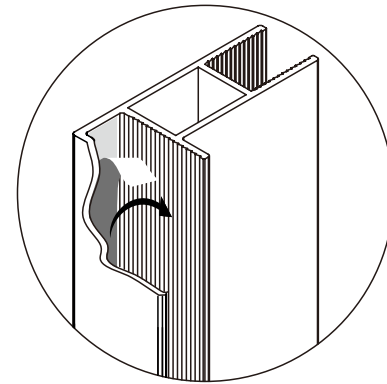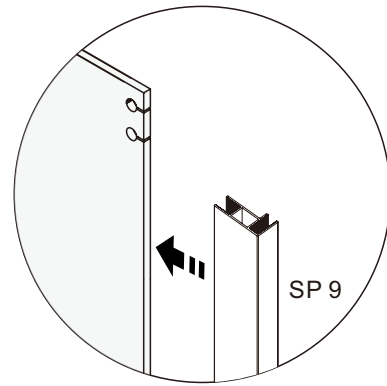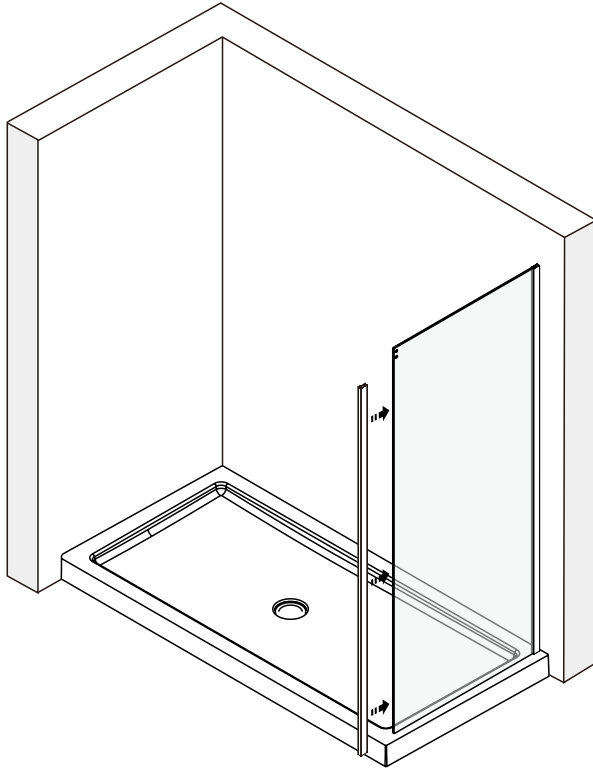


Split here the 3m tape

B 04

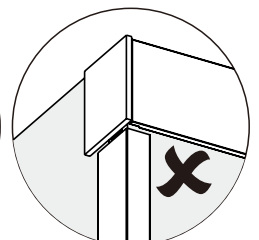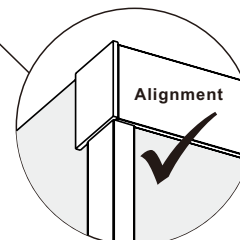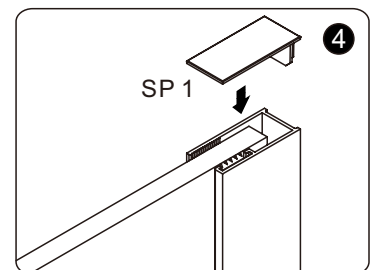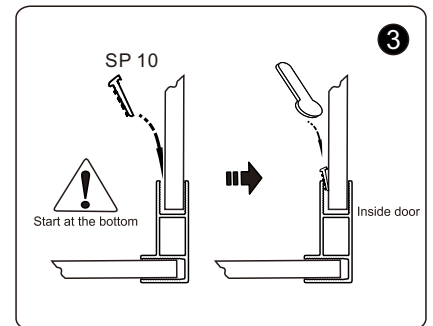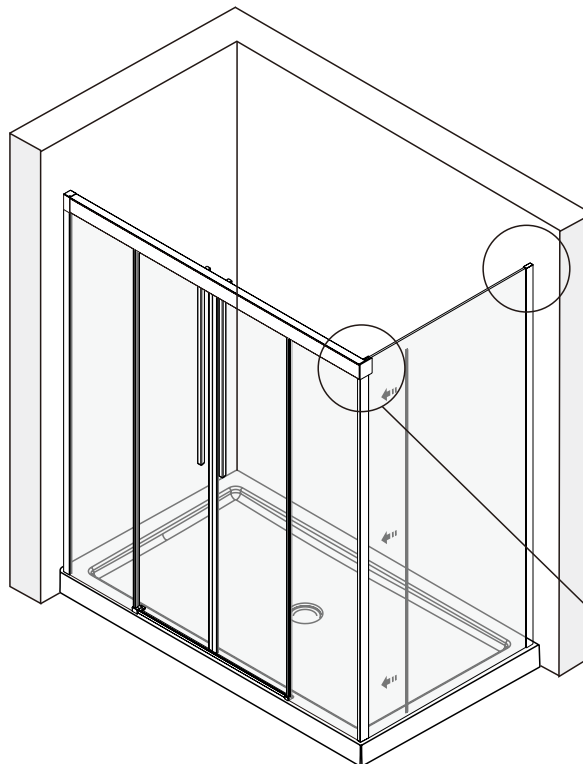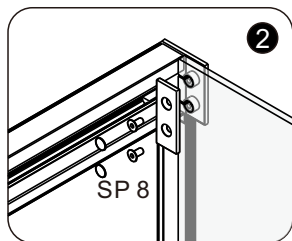
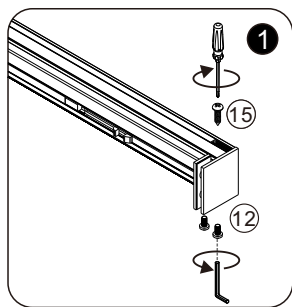


CONTINUED

B 05

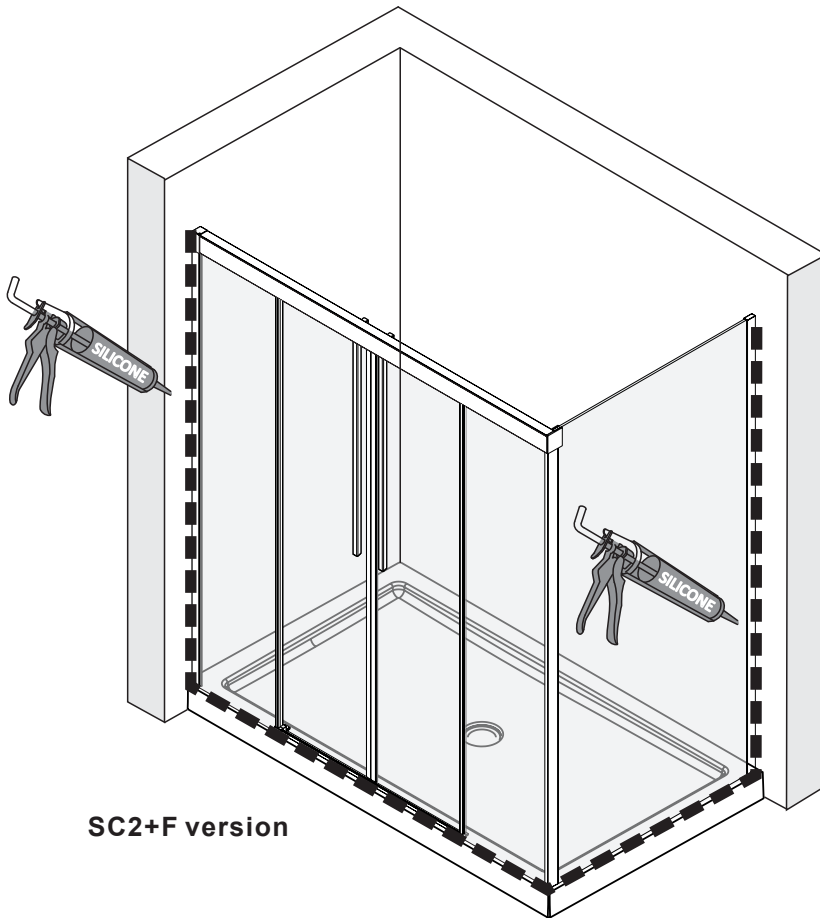

SC2+F version

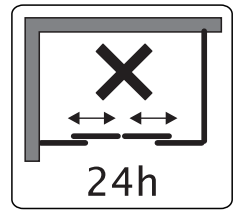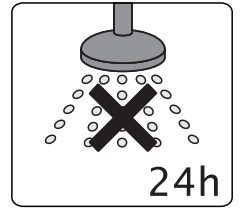

CONTINUED

C 01

SC2+F+F version

